


# DREMEL®

MODEL: 8300

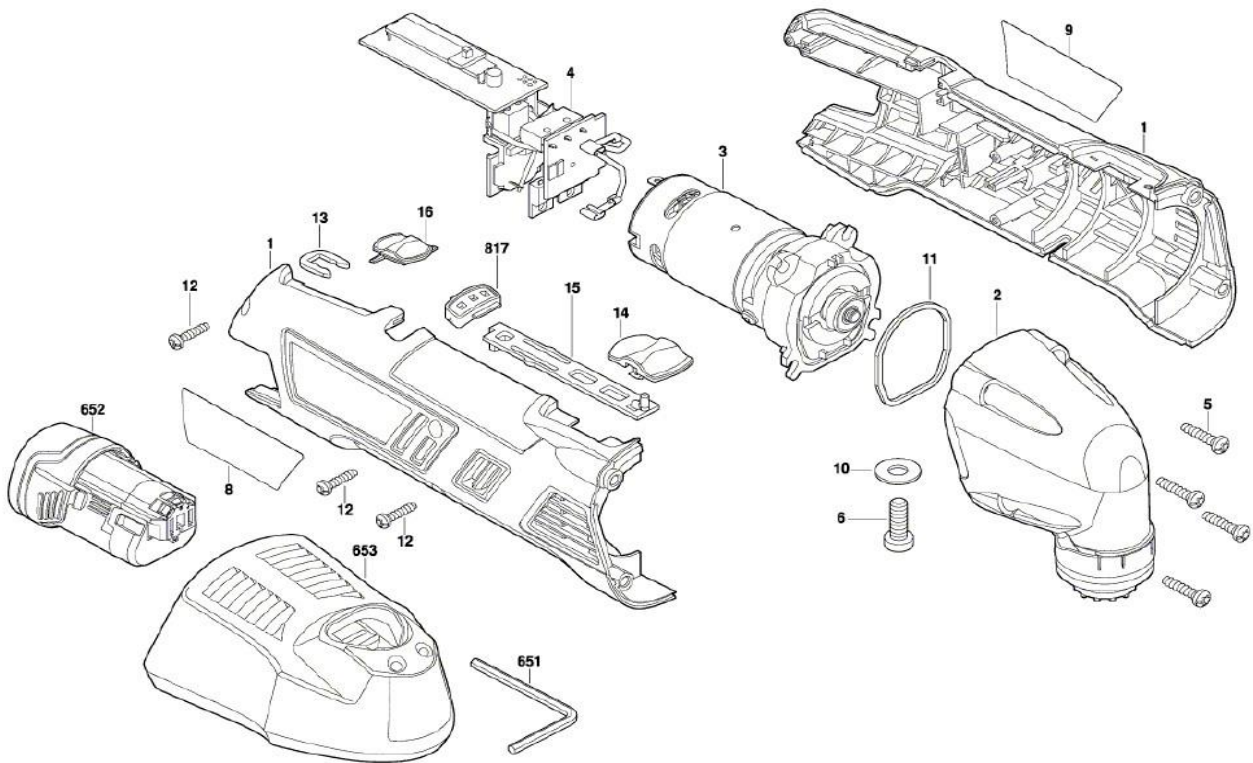

ITEM NO.	PART NO.	DESCRIPTION	ITEM NO.	PART NO.	DESCRIPTION
1	2610011181 Deleted by Dremel	Housing Assembly	15	2610011189	Switch Button
2	2610957872 Special Order Only	Housing	16	2610011190	Cap
3	2610011184	Motor	651	2610958411 Deleted by Dremel	Adjusting Wrench
4	2610005464	Electronic Assembly	652	<a href="#">1607A350H7</a>	Battery
5	2610956954	Screw	653	<a href="#">2607225689</a>	Charger 240V
6	2610945428	Screw	817	2610013398	Bezel Assembly
8	2610011195	Nameplate			
9	2610011194	Label			
10	2610945427	Washer			
11	2610956769	Mat Seal			
12	2610347948	Screw			

13	2609110537	Clip			
14	2610956785	Cap			